





Milwaukee

AMX Panel

Discovery Classroom

This Logo Page is the initial display

ithe .227j /TT2 1 TM22.02 45.365n2 45.35 0 Tn1883>Tj /T03>Tj /TT2 1 Tf 12 0 0 12 45.36 634.74 Tn

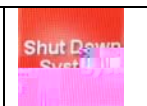		ShutDownSystem	Touchto turn off the systemand revert to the LogoPage.
		DirectoryDial, KeyboardDialand HangUp	VideoConferencinginformation locatedin the Multidirectional DigitalPage section(page5).

## Help




TheHelp button on the Main pagewill take you to the Helpscreen.

LightsTheLightsbutton on the Main pagewill take you to system



# SourceSelectionSubpage

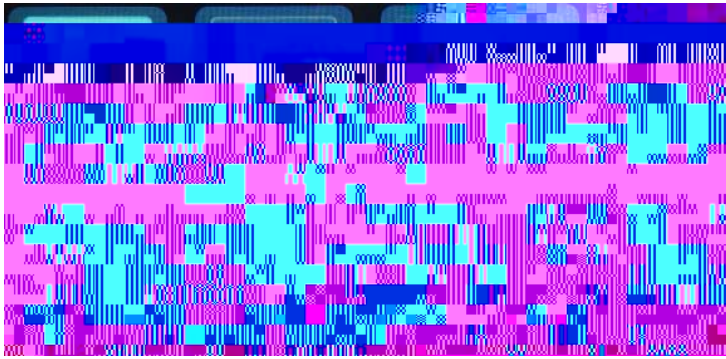

TheSourceSelectionsubpageis in the middle of the panel.Toucha source to send it to the projector.

Touchinga specificsourcewill highlightit andbring it to the front anchorposition.

## SOURCE NOTES

If a sourceis not poweredon, it will displayCheckPower(DocumentCamera).

If a sourceis not connected,it will displayNot Connected(PortableDeviceVGA).





## DisplayButtons



Oncea sourceis selected,pressall three Sendto Projectoriconsto send it to the correspondingprojectors.


Echo360Record– usedto start, stop, pauseor addfive minutesto the ECHO360lecturecapture recording.



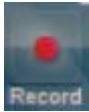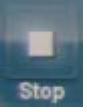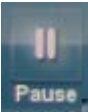





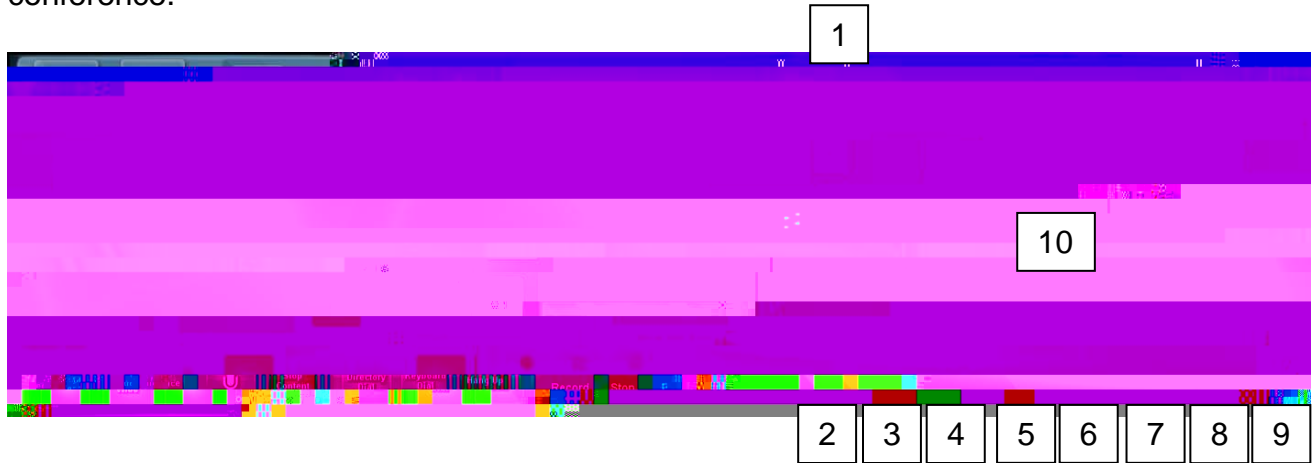



 <p>starts recording</p>	 <p>stops recording</p>	 <p>pauses recording</p>	 <p>- adds 5 minute increments if another session is not scheduled to start.</p>
Record	Stop	Pause	Five minutes

# Multidirectional Digital Page

The Multidirectional Digital Page of the AMX panel is displayed after successfully connecting to a video conference.

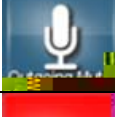

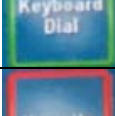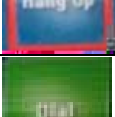
	Icon	Name	Function
1		ShareContent	Touch to share content with the far location. Note: Only appears after successful video conference connection.
2		Lectern	Touch to change camera zoom to a view of the lectern area.
3		LecternWide	Touch to change camera zoom to a wider view of the lectern area.
4		Audience	Touch to view the far location audience on the screen.
5		OutgoingMute	Touch to mute all microphones in the near location. Note: Audio from the far location will still be heard.
6		StopContent	Touch to stop content delivery to the far location.
7		DirectoryDial	Touch to activate an online directory prior to dialing into a video conference.
8		KeyboardDial	Touch to activate an online keyboard prior to dialing into a video conference.
9		HangUp	Touch to hang up or disconnect from a video conference.
10		Dial	Touch to dial and connect to a video conference. Note: Appears after pressing the Directory Dial button.

## ShareContent



The ShareContent button will share content from the near location selected source to the far location.

Touch a source (i.e., Lectern Computer, etc.) from the middle of the AMX panel and touch the ShareContent button.

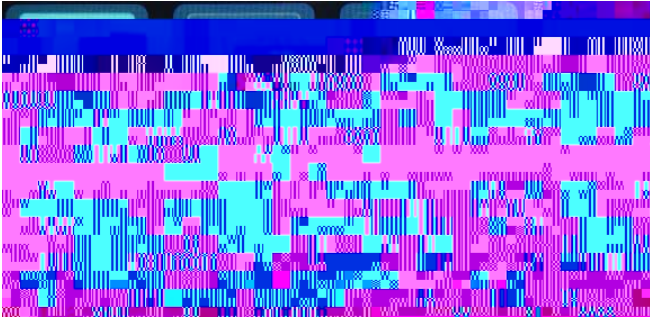

## StopContent






The StopContent button will stop the delivery of content from the near location to the far location.

near will

## CameraPreset

The CameraPreset buttons (Lectern, Wide Lectern and Audience) control the camera zones in the far the

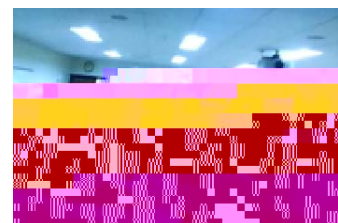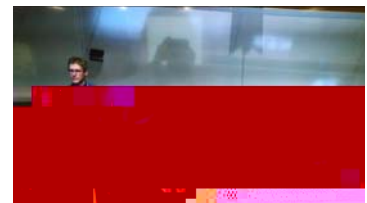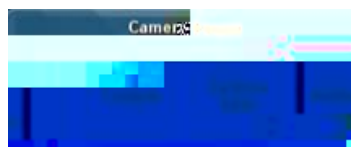

## Dial and HangUp



The Dial and Hangup functions are located in the lower right of the screen and are used to initiate (Directory Dial and Keyboard Dial) and end (Hang Up) a video conference call.


## Directory Dial



The Directory Dial button will activate a subpage on the right side of the screen.

To initiate a call:

1. Touch Directory Dial.
2. Select the desired location (M1 Class, M2 Class, etc.)
3. Touch the green Dial.

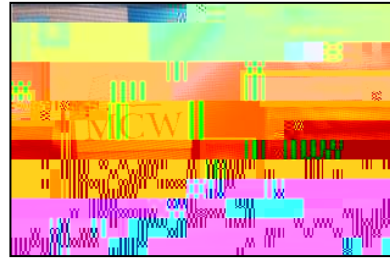

## Keyboard Dial



The Keyboard Dial button is an advanced video conferencing dialing feature via the keyboard. If you need further assistance with this feature, contact Media Services at [mediaservices@mcw.edu](mailto:mediaservices@mcw.edu) or (414) 955-4357, option 2 or consult the instruction sheet in the room.








## HangUp



 
The Hang Up button will disconnect the video conference. Note: After hanging up, the Camera Preset buttons will disappear from the AMX Panel.

## Sources


These sources appear on the AMX panel:

Icon	Source
	Appears for both the Lectern VGA connection and the Lectern HDMI connections. Both would be used for a laptop or iPad. Note: The HDMI connector carries the audio along with the video.
	Document Camera Appears when the camera (stored in left hand drawer) is in use.
	Lectern Computer The lectern computer is located in the bottom of the lectern cabinet.
	Portable Device (VGA or HDMI) Indicates a laptop is connected and ready to display.
	Video Conference Conferences one location (i.e., MCW Milwaukee Discovery Classroom) to another (i.e., MCW Green Bay St. Norbert College, MCW Central WI).
	Mac Mini Indicates that the Macintosh mini (located in the lectern) is connected and ready to display.
	Display Logo Used to display between presentation changes.

## Shut Down System



The Shut Down System button on the Main page will turn off the AMX panel and screen projection.

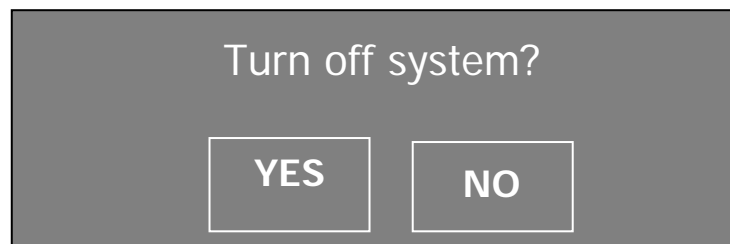

After pressing the option YES the system will countdown 90 seconds and shut down.

