



Milwaukee

AMX Panel

Kerrigan Auditorium

This Logo Page is the initial display when the AMX panel is not active.



To start the system, touch the panel.

 

During activation, the audio system is powered up and the touch panel display changes to the Main Page.

When the system is off, it reverts back to the Logo Page.

Main Page

The Main Page of the AMX panel is where every aspect of the

	Help	Touch to see the Help screen.
		

		ShutDownSystem	Touchto turn off the systemand revert to the LogoPage.
		DirectoryDial, KeyboardDialand HangUp	VideoConferencinginformation locatedin the Multidirectional DigitalPage section(page5).

Help




TheHelp button on the Main pagewill take you to the Helpscreen.

TheLights button on the Main pagewill take you to the Lightsmenu.



Menu

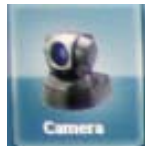

SourceSelectionSubpage

TheSourceSelectionsubpageis in the middle of the panel.Toucha source to send it to the projector.

Touchinga specificsourcewill highlightit andbring it to the front anchorposition.

SOURCE NOTES

- x If a sourceis not poweredon, it will displayCheckPower(DocumentCamera).
- x If a sourceis not connected,it will displayNot Connected(PortableDeviceVGA).

DisplayButtons


Oncea sourceis selected,pressall three Sendto Projectoriconsto sendit to the correspondingprojectors.











Echo360Record– usedto start, stop, pauseor addfive minutesto the ECHO360lecturecapture recording.

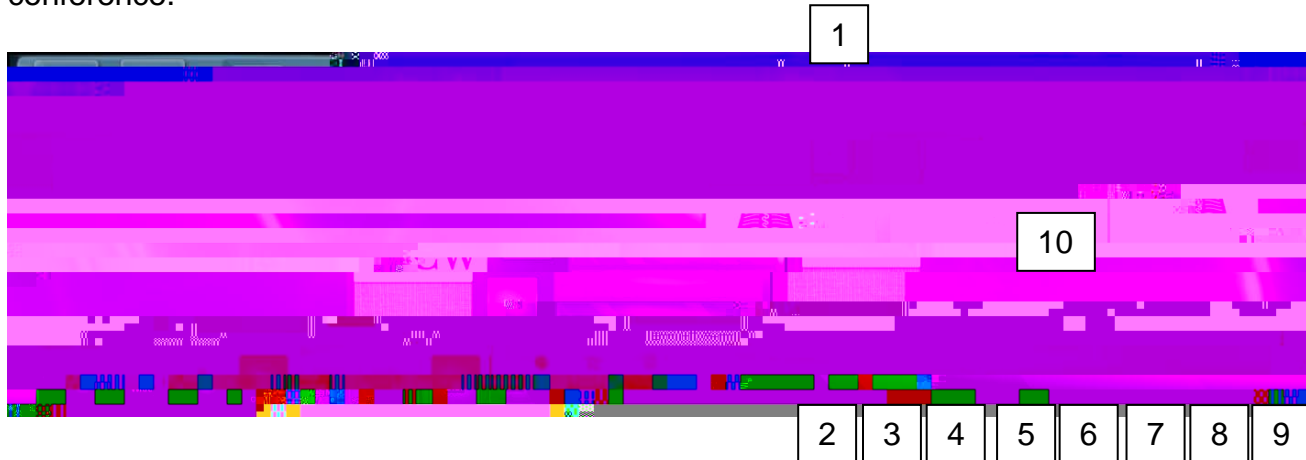startsrecording	rstopsrecording	rpause recording	- adds5 minute incrementsif another sessionis not scheduled to start. <0003>Tj /T4 rw>Tj /TT
-----------------	-----------------	------------------	--

Multidirectional Digital Page

The Multidirectional Digital Page of the AMX panel is displayed after successfully connecting to a video conference.

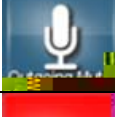

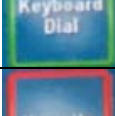
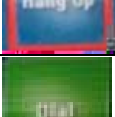
	Icon	Name	Function
1		ShareContent	Touch to share content with the far location. Note: Only appears after successful video conference connection.
2		Lectern	Touch to change camera zoom to a view of the lectern area.
3		LecternWide	Touch to change camera zoom to a wider view of the lectern area.
4		Audience	Touch to view the far location audience on the screen.
5		OutgoingMute	Touch to mute all microphones in the near location. Note: Audio from the far location will still be heard.
6		StopContent	Touch to stop content delivery to the far location.
7		DirectoryDial	Touch to activate an online directory prior to dialing into a video conference.
8		KeyboardDial	Touch to activate an online keyboard prior to dialing into a video conference.
9		HangUp	Touch to hang up or disconnect from a video conference.
10		Dial	Touch to dial and connect to a video conference. Note: Appears after pressing the Directory Dial button.

ShareContent



The ShareContent button will share content from the near location selected source to the far location.

Touch a source

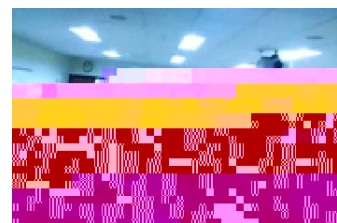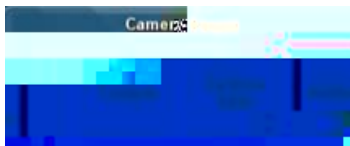

Dial and HangUp



The Dial and Hangup functions are located in the lower right of the screen and are used to initiate (Directory Dial and Keyboard Dial) and end (Hang Up) a video conference call.


Directory Dial



The Directory Dial button will activate a subpage on the right side of the screen.

To initiate a call:

1. Touch Directory Dial.
2. Select the desired location (M1 Class, M2 Class, etc.)
3. Touch the green Dial.

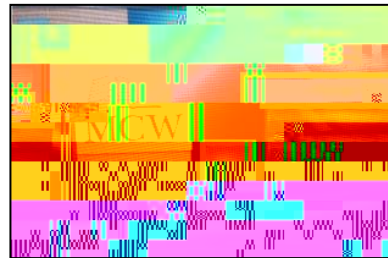

Keyboard Dial



The Keyboard Dial button is an advanced video conferencing dialing feature via the keyboard. If you need further assistance with this feature, contact Media Services at mediaservices@mcw.edu or (414) 955-4357, option 2 or consult the instruction sheet in the room.


HangUp



The Hang Up button will disconnect the video conference. Note: After hanging up, the Camera Preset buttons will disappear from the AMX Panel.

Sources

Thesesourcesappear

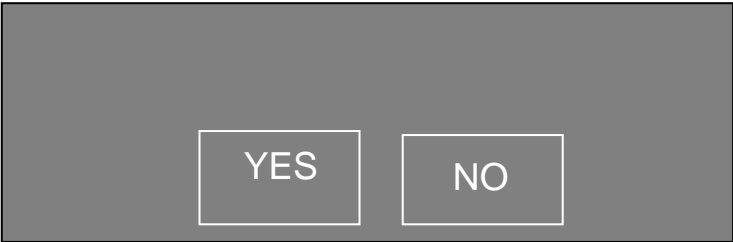

A dark gray rectangular area containing two white-outlined buttons labeled "YES" and "NO".