


7		Shutdown System	Touch to turn off the system and revert to the Logo Page.
---	---	-----------------	---

Help



The **Help** button on the Main page will take you to the Help screen.

Volume

The **Volume** of the audio system is controlled in the upper left of the screen.



The **Volume Down** button lowers volume (shortens the white indicator bar).

 


The **Volume Mute** button mutes volume; changes to **red** to indicate the volume is muted. When pressed again, it will unmute volume.



The **Volume Up** button raises volume (lengthens the white indicator bar).

Source Selection Subpage

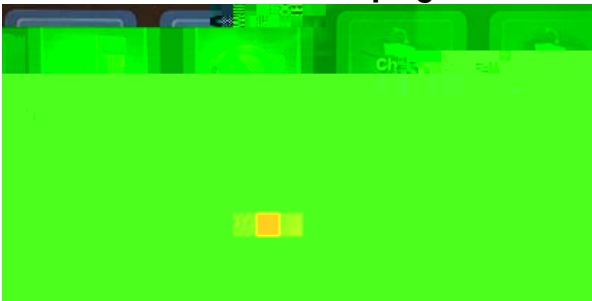

The Source Selection subpage is in the middle of the panel. Touch a source to send it to the projector.

Touching a specific source will highlight it and bring it to the front anchor position.

SOURCE NOTES

If a source is not powered on, it will display **Check Power** (Document Camera).

If a source is not connected, it will display **Not Connected** (Portable Device VGA).

Display Button



Once a source is selected, press **Send to Projector** icon to send it to the corresponding projectors.

Multidirectional Digital Page

The **Multidirectional Digital Page** of the AMX panel is displayed after successfully connecting to a video conference.



	Icon	Name
--	------	------



Share Content

 


The **Share Content** button will share content from the near location selected source to the far location.

Touch a source (i.e., Lectern Computer, etc.) from the middle of the AMX panel and touch the **Share Content** button.



Stop

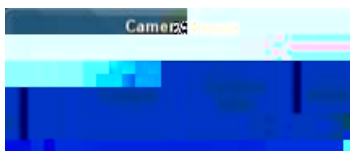

Dial and Hang Up



The Dial and Hang up functions are located in the lower right of the screen and are used to initiate (Directory Dial and Keyboard Dial) and end (Hang Up) a video conference call.

 
Directory Dial




The **Directory Dial** button will activate a subpage on the right side of the screen.

To initiate a call:

1. Touch **Directory Dial**.
2. Select the **desired location** (M1 Class, M2 Class, etc.)
3. Touch the green **Dial**.

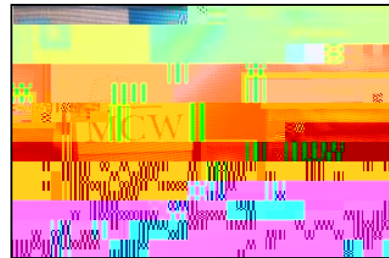

Keyboard Dial

 

The **Keyboard Dial** button is an advanced video conference dialing feature via the keyboard. If you need further assistance with this feature, contact **Media Services** at mediaservices@mcw.edu or (414) 955 4357, option 2 or consult the instruction sheet in the room.

Hang Up



The **Hang Up** button will disconnect the video conference. Note: After hanging up, the Camera Preset buttons will disappear from the AMX Panel.

