

AMXPanel

MCWMilwaukee

RoomsM2050and M2070

This Logo Page is the initial display when the AMX panel is not active. To start the system, touch the panel. During activation, the audio system is powered up and the touch panel display changes to the Main Page. When the system is off, it reverts back to the Logo Page.

Main Page

The Main Page of the AMX panel is where every aspect of the system is controlled.



Icon	Name	Function
	Help	Touch to see the Help screen.
	Volume Low	Touch to lower the podium/room volume levels.
	Volume Mute	Touch and the button will flash red indicating the volume is muted. When touched again, it will unmute the volume.
	Volume High	Touch to raise the podium/room volume levels.
	Projector	Once a source like PCTower is selected, touch the Send to Projector button to send that source to the projector.
	Room	

		ShutdownSystem	Touch to turn off the system and revert to the LogoPage.
--	--	----------------	--

Help

The Help button on the Main page will take you to the Help screen.

Volume

The Volume of the audio system is controlled in the upper left of the screen.

The Volume Down button lowers volume (shortens the white indicator bar).


The Volume Mute button mutes volume; changes to  to indicate the volume is muted. When pressed again, it will unmute volume.

The Volume Up button raises volume (lengthens the white indicator bar).

Source Selection Subpage

The Source Selection subpage is in the middle of the panel. Touch a source to send it to the projector.

Touching a specific source will highlight it and bring it to the front anchor position.

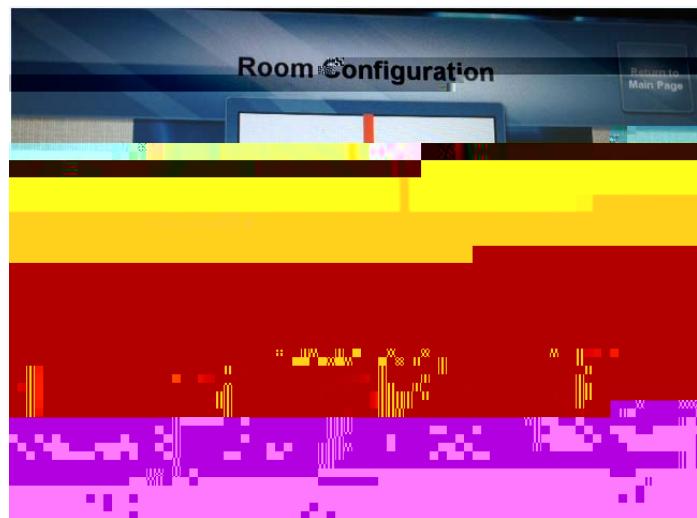

Multidirectional Digital Page

The Multidirectional Digital Page of the AMXpanel is displayed after successfully connecting to a video conference.



Icon	Name	Function	
	ShareContent	Touch to share content with the far location. Note: Only appears after successful video conference connection.	
	Lectern	Touch to change camera zone to a view of the lectern area.	
	LecternWide	Touch to change camera zone to a wider view area.	Wide




ShareContent



The ShareContent button will share content from the near location selected source to the far location.

Touch a source (i.e., Lectern Computer, etc.) from the middle of the AMX panel and touch the ShareContent button.

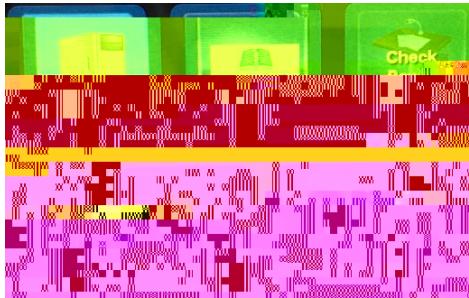

StopContent



The StopContent button will stop the delivery of content from the near location to the far location.

CameraPreset

The CameraPreset buttons (Lectern, Wide Lectern and Audience) control the camera zones in the far location.

Button	Name	Zone	Image
A blue rectangular button labeled "Lectern" with a red border.	Lectern	Lectern area.	A video frame showing a person at a podium in a room.
A blue rectangular button labeled "Lectern Wide" with a red border.	Lectern Wide	Wider view of the lectern area (i.e., patient interview speaker panel, etc.).	A video frame showing a wider view of the room, including the person at the podium and some background elements.
A blue rectangular button labeled "Audience" with a red border.	Audience	Audience at the local location.	A video frame showing people seated in an audience area.

Dial and HangUp



The Dial and Hangup functions are located in the lower right of the screen and are used to initiate (Directory Dial) and end (Hang Up) a video conference call.


Directory Dial



The Directory Dial button will activate a subpage on the right side of the screen.

To initiate a call:

1. Touch Directory Dial.
2. Select the desired location (M1 Class, M2 Class, etc.)
3. Touch the green Dial.

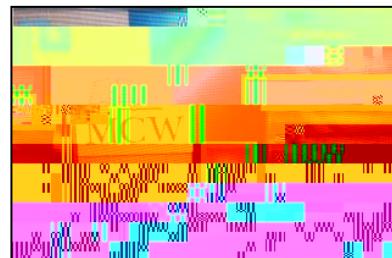

Keyboard Dial



The Keyboard Dial button is an advanced video conferencing dialing feature via the keyboard. If you need further assistance with this feature, contact Media Services at mediaservices@mcw.edu or (414) 955 4357, option 2 or consult the instruction sheet in the room.

HangUp



The Hang Up button will disconnect the video conference. Note: After hanging up, the Camera Preset buttons will disappear from the AMX Panel.

Sources


These sources appear on the AMX panel:

Icon	Source
	Appears for both the Lectern VGA connection and the Lectern HDMI connections. Both would be used for a laptop or iPad. Note: The HDMI connector carries the audio along with the video.
	Lectern Computer The lectern computer is located in the bottom of the lectern cabinet.
	Portable Device (VGA or HDMI) Indicates a laptop is connected and ready to display.
	Blu Ray Player Indicates that the Blu Ray player is connected and ready to display.
	Video Conference Conferences in one location (i.e., MCW Milwaukee Discovery Classroom) to another (i.e., MCW Green Bay, St. Norbert College, MCW Central WI).
	Display Logo Used to display between presentation changes.

Shutdown System



The Shutdown System button on the Main page will turn off the AMX panel and any of sources currently activated.

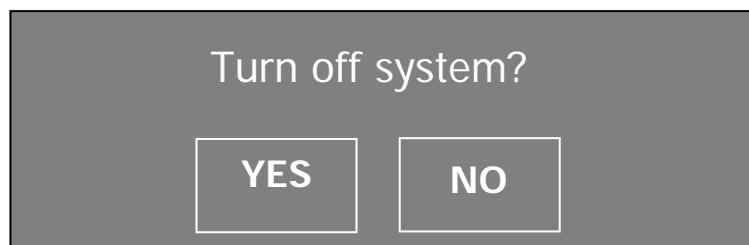

After pressing the option YES the system will countdown 90 seconds and shutdown.

